



LED BULB

HIGH POWER LED HEADLAMP BULB

OWNERS MANUAL

NOTE:

- * *Non-Canbus Type*
- * *May require Resistors on some Cars*
- * *Resistors Sold Separately*

Due to slight variances between different vehicles, some bulbs may feel excessively loose or tight. Sometimes the best fit may be found by using the stock O-ring on your existing bulbs.

CAUTION:

Do not touch the bulb tip with your fingers as oils may adversely affect the headlamp bulb's performance. Headlamp bulb lens is **not** glass—do not clean with solvents or harsh chemicals.

NOKYA™ LED HEADLAMP BULB WARRANTY

This product is guaranteed to be free from manufacturing defects for a period of 12 months from the date of purchase (to the original purchaser only).

Please send your non-working parts back to us at:

MTQ INC - WARRANTY
12350 Montague St, Unit J
Pacoima, CA 91331

What to include:

1. A copy of proof of purchase showing the product, date, & purchaser name.
2. If one bulb is not working please send the bulb and the voltage regulator (little black box).
3. Your return address.

We will inspect and replace as necessary. We typically have a one day turn-around from the time we receive it until we ship it back to you.

Note:

You are responsible for the shipping charges to us, we will cover the shipping charges back to you (Continental US only). For questions please call us at 818-896-4852.

* Please use a shipping method with tracking as we are not responsible for packages lost in transit.

INSTALLATION:

Step 1:

Remove your existing headlamp bulbs and visually inspect to insure compatibility with the new LED headlamp kit.

Step 2:

Without touching the headlamp bulb tip, carefully install in headlamp housing. Make sure bulb is fully locked in place.

Step 3:

Attach the voltage regulator to the car's harness and the LED headlamp bulb.

Step 4:

Use zip ties or screws to fasten the voltage regulator to the car. When choosing your location, please keep in mind regulator does get warm.